


## **USER MANUAL**

Thank you for purchasing precision, click adjustable ZB mounts. To enjoy your mounts for many years to come, please read the instructions carefully. **Please do not temper with any elements of this mount that are not assigned in this manual as operational.** 

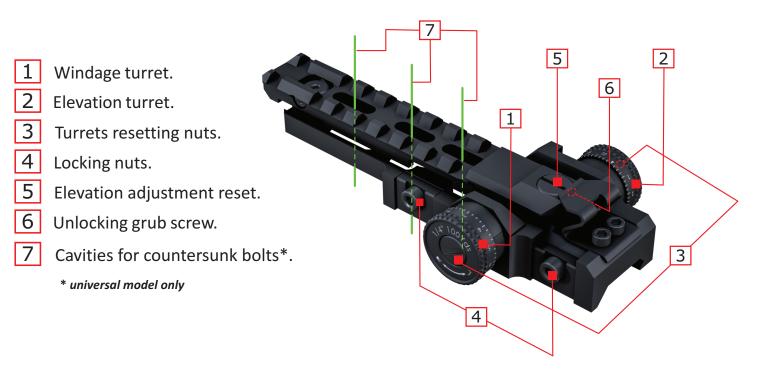

Place ZB mount onto the gun picatinny rail and secure it by tightening two socket cap screws (4) with allen key (supplied). Install the device that you are planning to zero onto the top rail and secure it by picatinny type clamps, or by using countersunk bolts (Universal model only).

Operate Elevation and Windage turrets (1) to zero the device. After zeroing is complete, reset turrets to "0". To do this, remove the screws (3) on both the turrets with a suitable size coin or flat screwdriver, then remove the the turret cap and reinstall it back, making sure that the "0" mark sits against the white line.

In unlikely event that more elevation adjustment is needed, this can be further increased by rotating the elevation adjustment reset screw (5) clockwise. To do this you need to unlock the screw by slacking the small grub screw (6) with an allen key (supplied). After the adjustment is made, return the small grub screw into the locking position.

This mount does not have any serviceable part and does not require any special care, but we recommend to keep it clean and dry.

## Product specifications.

Technical Specifications	Pro	Extended	Universal
Maximum payload			
recoilless and light recoil force guns (kg)	0.8	0.8	0.8
medium recoil force guns (kg)	0.4	0.4	0.4
Click Value Elevation (MOA)	0.25	0.25	0.25
Click Value Windage (MOA)	0.25	0.25	0.25
Max Adjustment Elevation (MOA)	90	90	90
Max Adjustment Windage (MOA)	60	60	60
Weight (gr)	225	260	195
Dimensions (mm)	145x65x27	260x65x27	145x65x27
Top Weaver Rail Length (mm)	90	200	90
Locking Jaws Span (mm)	54	54	54

